

3-323-3-1300-01

3-319-300x400

3-319-300x200

3-312-3

9-1602-45

9-1601-216

1-326-0

1-115-1920

1-105-3

3-910



9-1602-45

1-112-3


OBS! Skäraggatet ska var vänt,
så det är närmast framkant på bord.
(Felvänt på bilden)
Sätts enklast fast med
häftkuddar/dubbelhäftande tejp. OBS!

Art.nr: 9-730-0
Title:



Date: 20160921
Rev: 1/1
Side:
www.wfiab.se

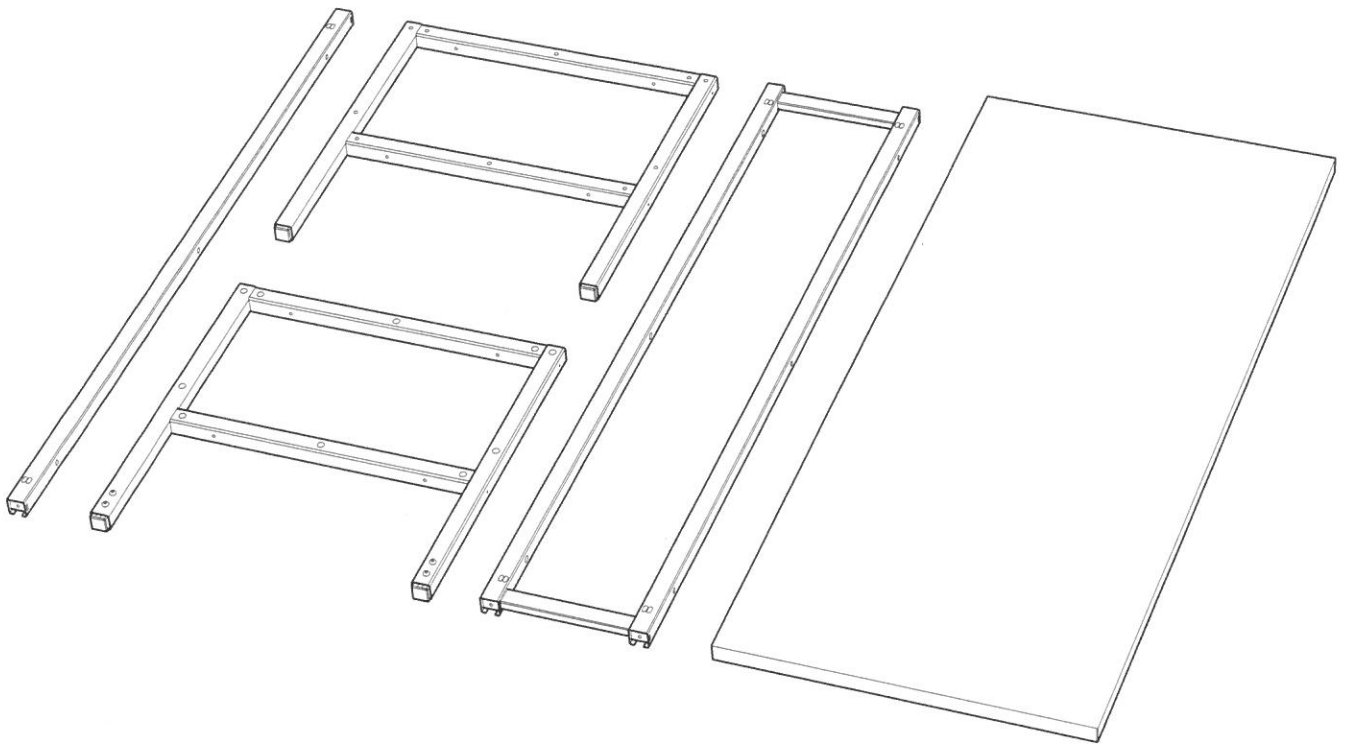


6x




6x

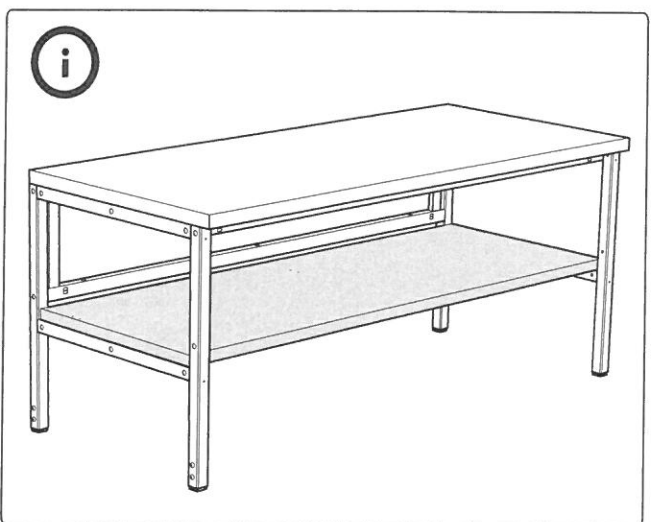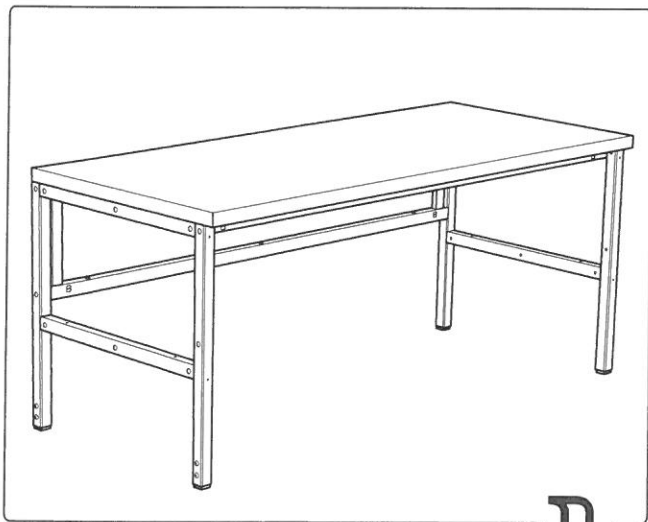


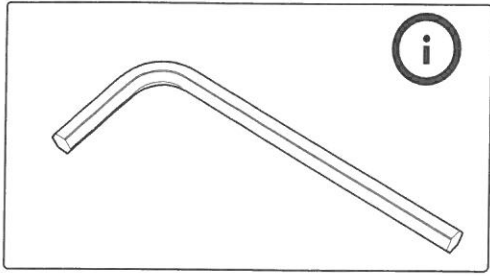


1

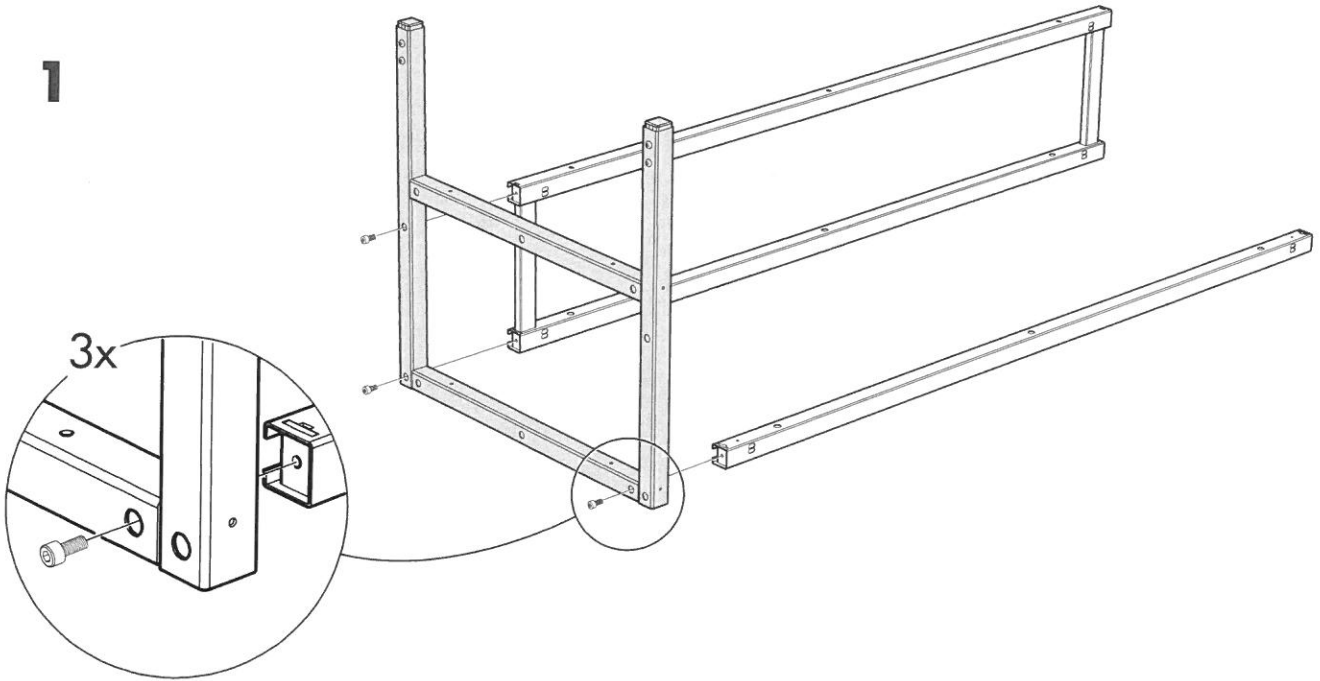


2

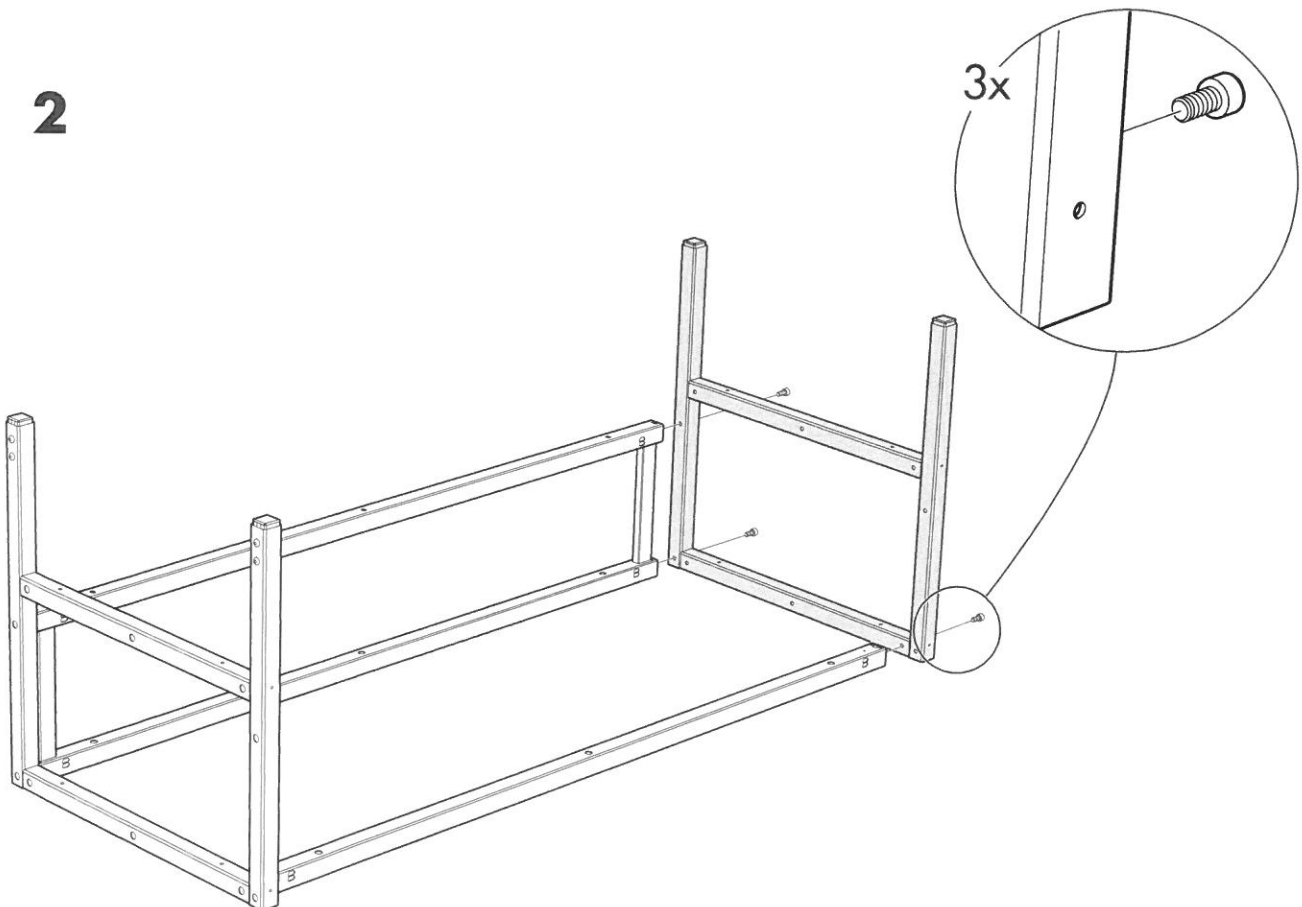

3

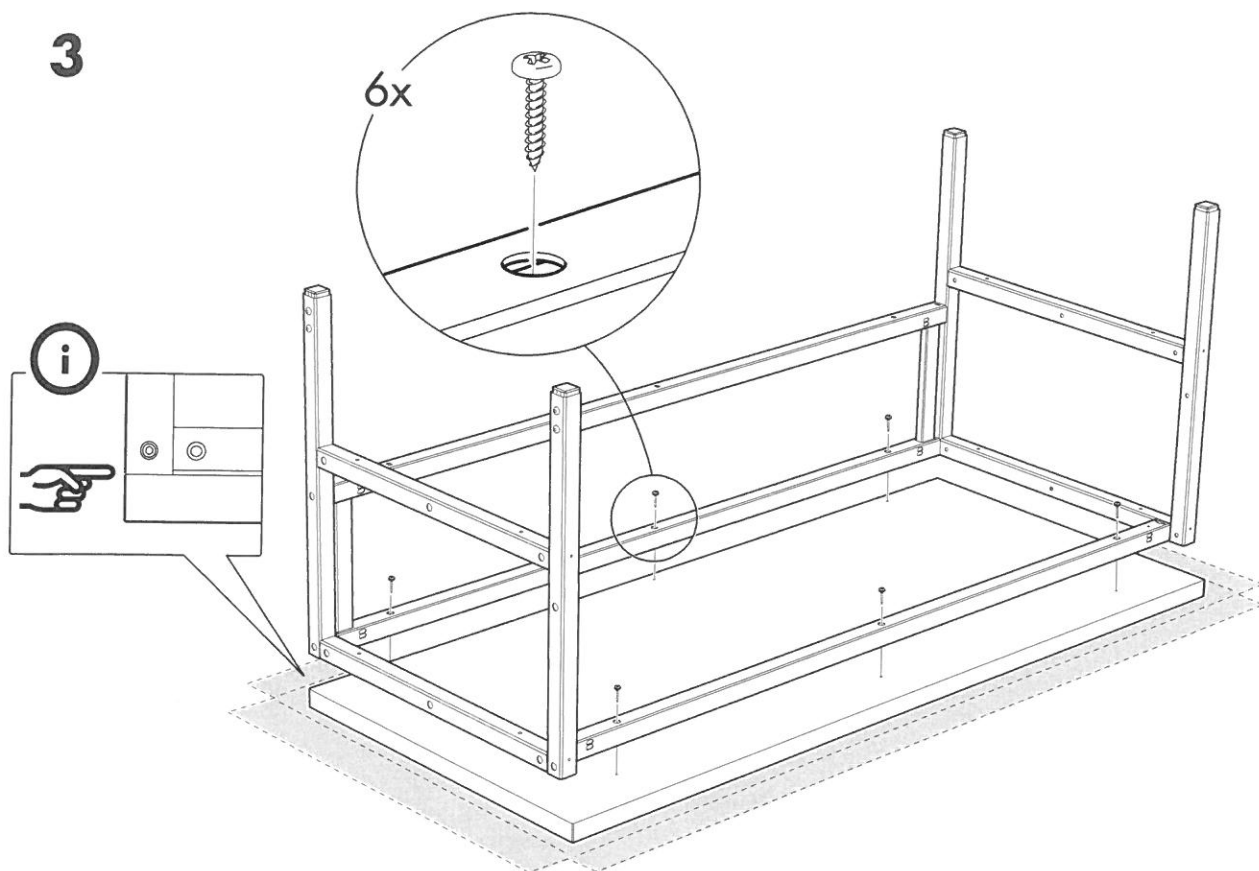

4

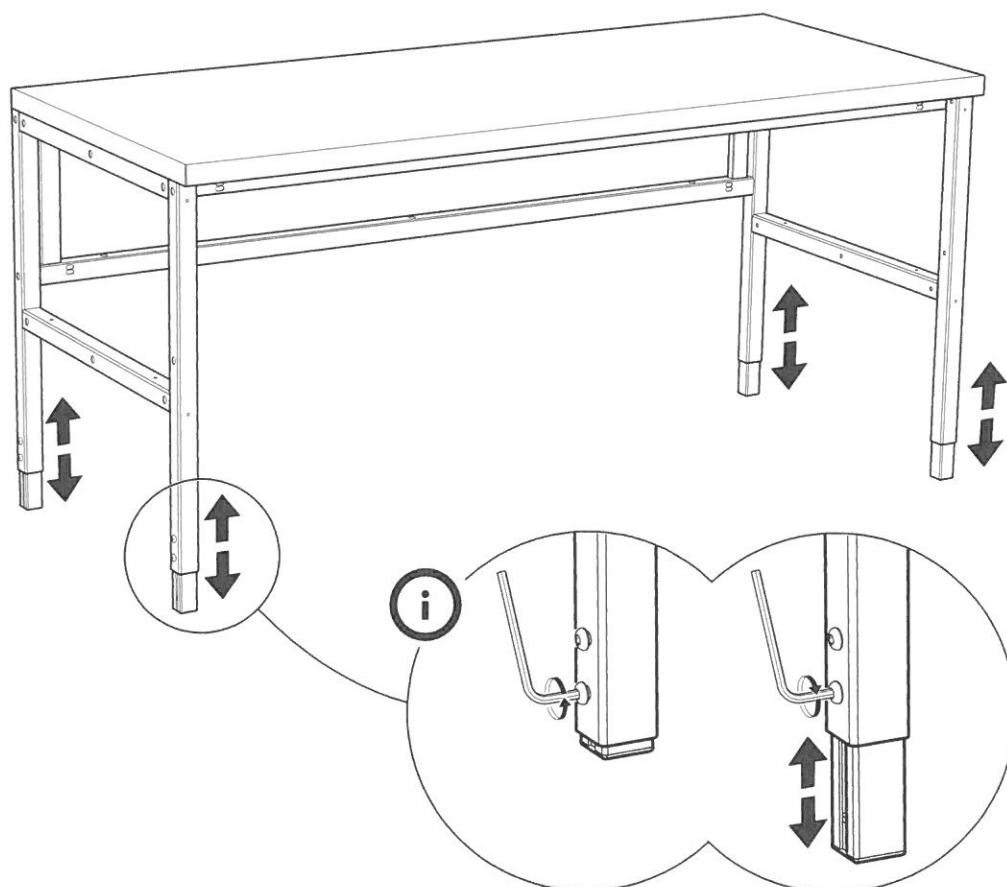




A 2x M8x70

B 2x 8.5x22

C 2x M8

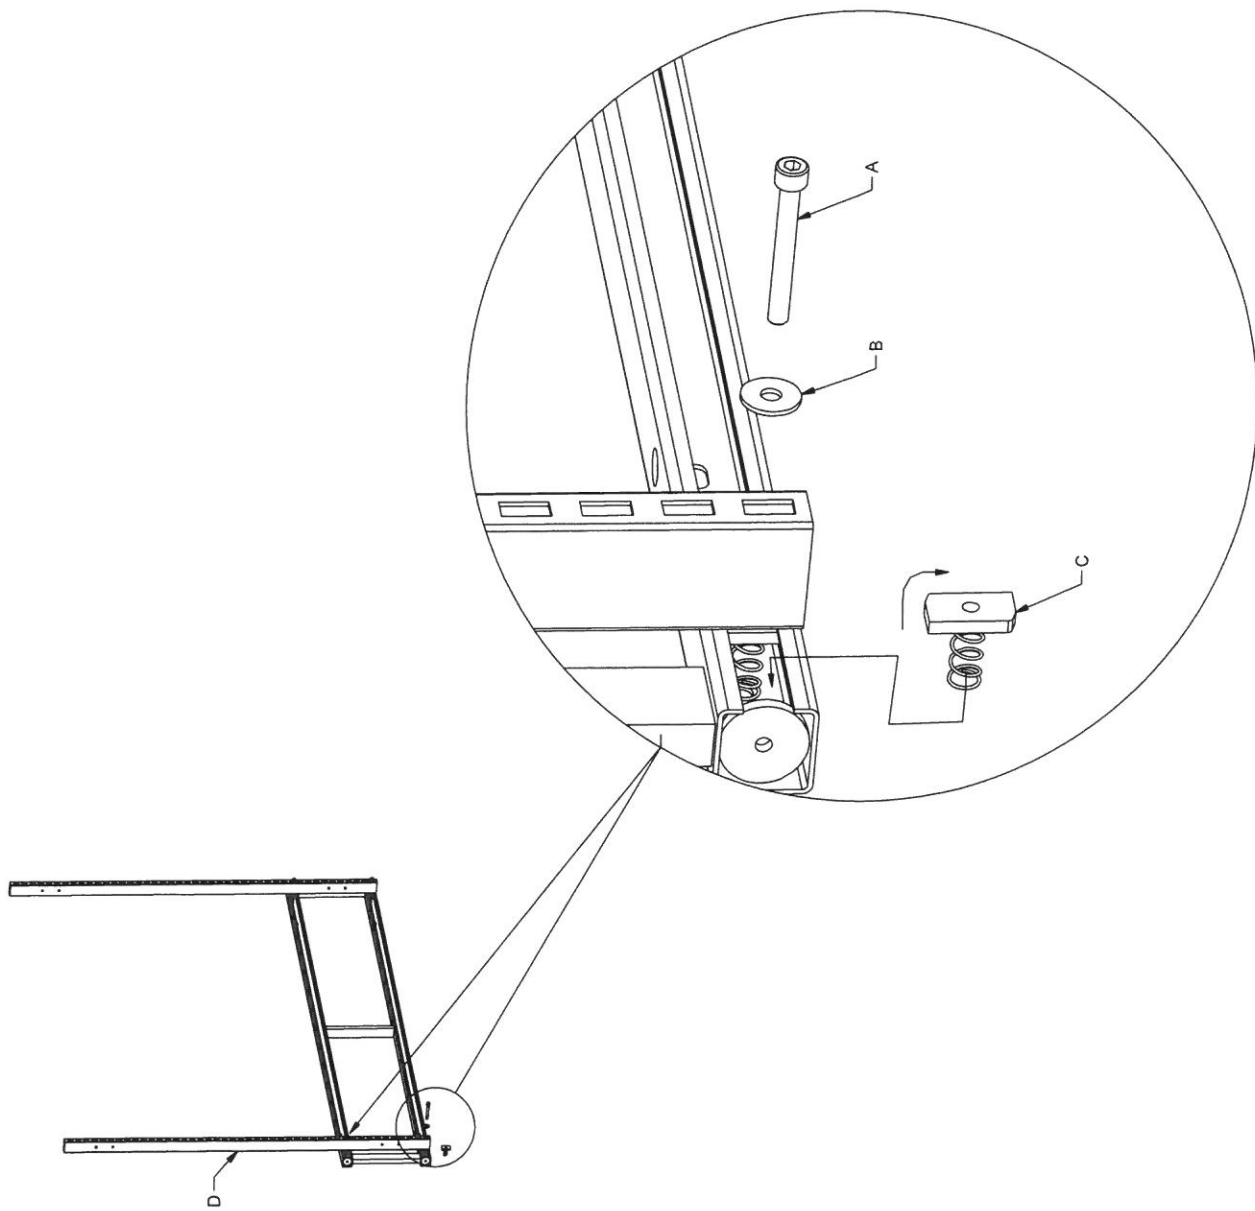

Art.nr: 3-313-0-ASM1
Title:

Date: 20160531
Rev: 01

Side: 1/1



www.wfi.se

- A 1x M6x12
B 1x M6


- C 1+1

- D 1+1

- E 1x

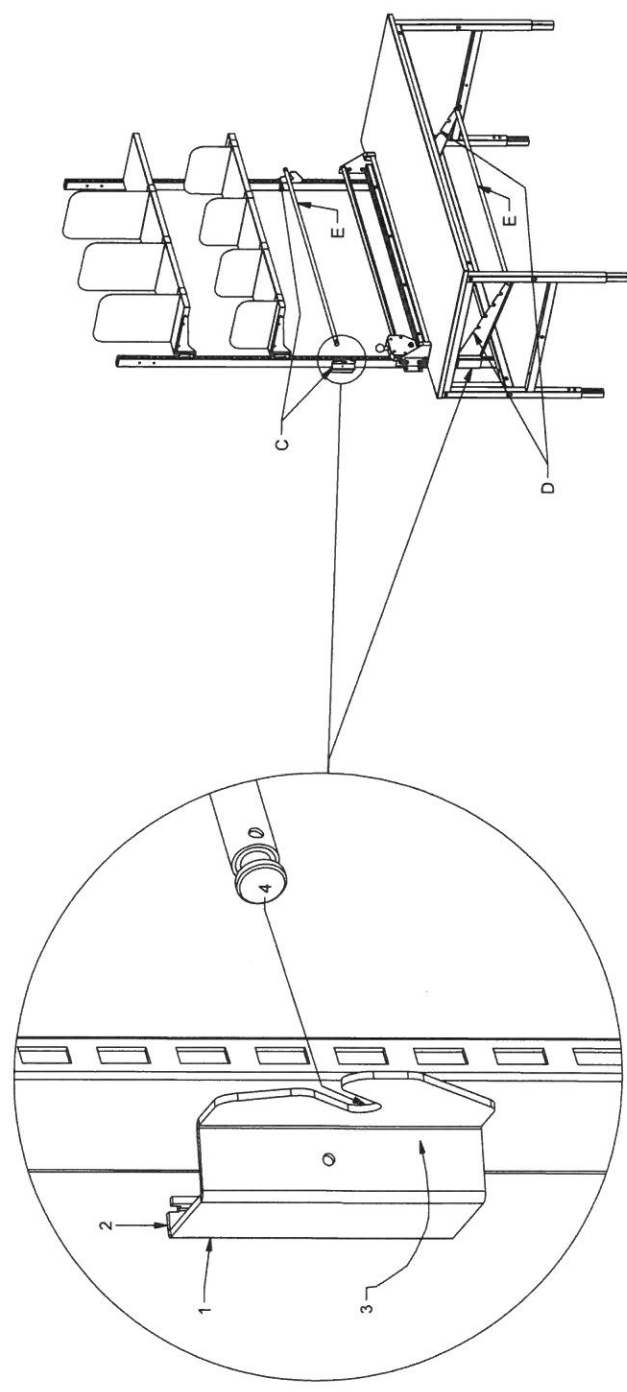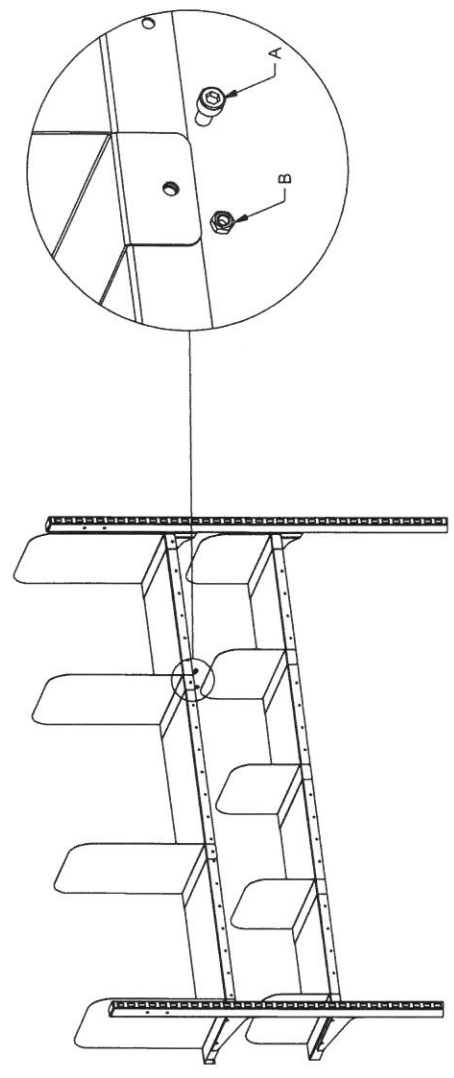

- A 4x M8x70
- B 4x 8.5x22
- C 4x M8
- D 2x

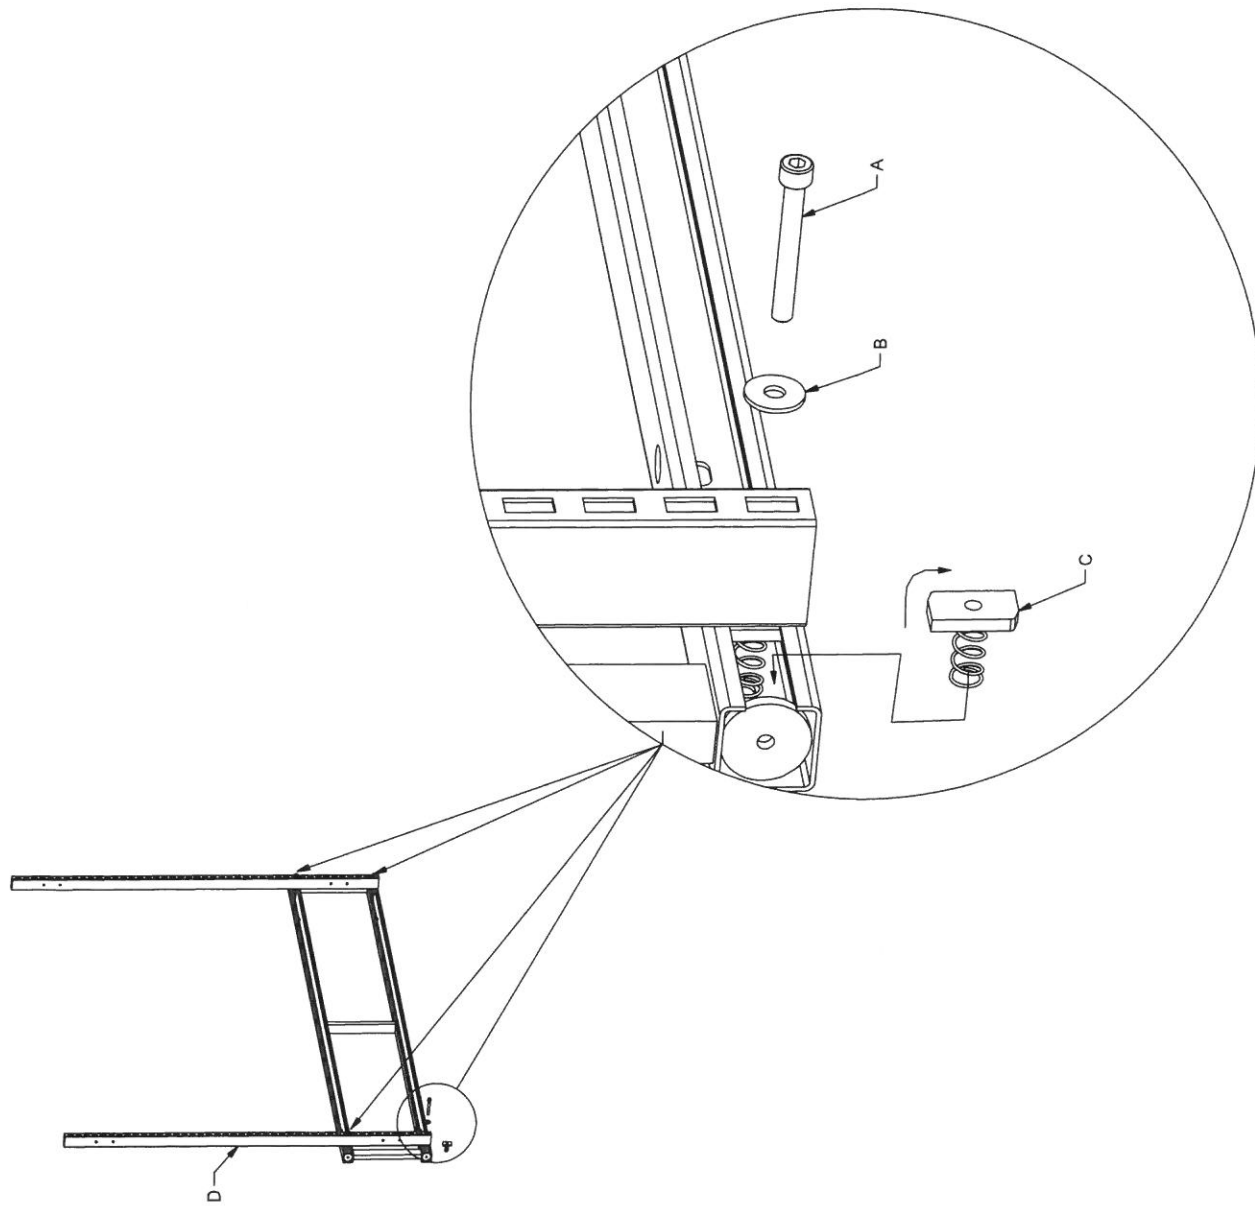

Art.nr: 9-1601-ASM3
Title:

Date: 20160531
Rev: 01
Side: 1/1
www.wfi.se







A 4x M6x12



B 4x 6.2x16



C 4x M6

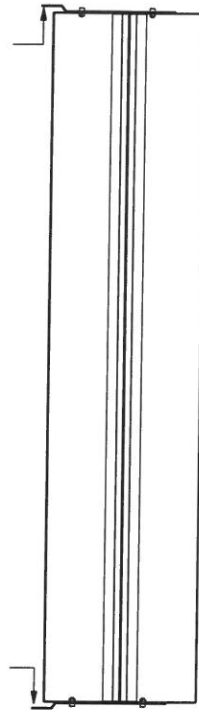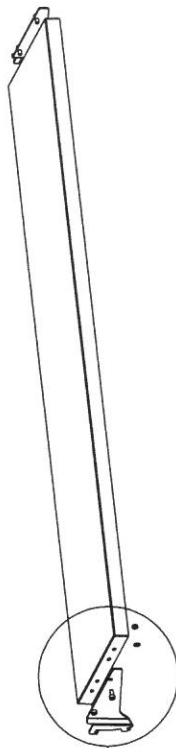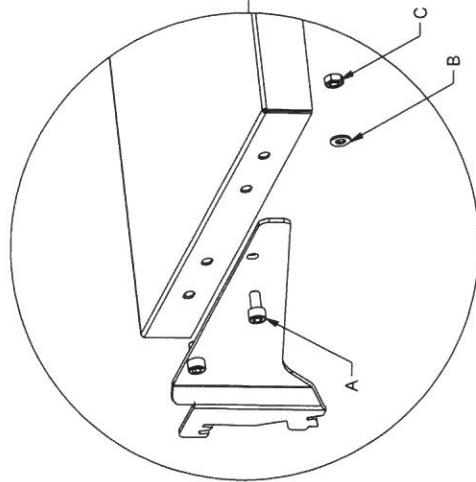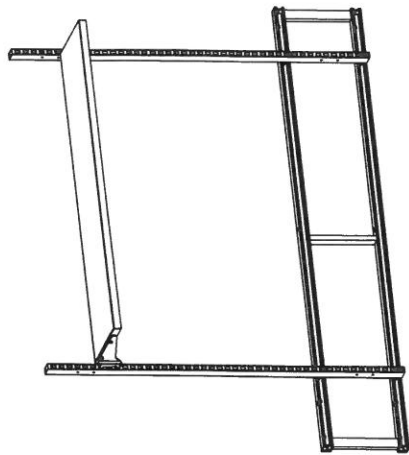

Art.nr: 9-1601-ASM4
Title:

Date: 20160531
Rev: 01
Side: 1/1
www.wfi.se